AUTOCOMMAND®

Model 20095

➤Owner's Guide

limited lifetime consumer warranty

Directed Electronics (hereinafter "Directed") promises to the original purchaser to repair or replace with a comparable reconditioned Directed DIY unit if this Directed DIY unit (hereinafter "Unit"), excluding without limitation, any remote transmitters or associated accessories, proves defective in materials or workmanship under normal use for the life of the vehicle which the Unit is originally installed. During this period, so long as the Unit remained installed in the original vehicle, Directed will at its option, repair or replace this Unit if it is proved defective in workmanship or material PROVIDED the Unit is returned to Directed's warranty department at One Viper Way, Vista, CA 92081, along with $20 postage and handling fee, a bill of sale or other dated proof of purchase bearing the following information: Date of purchase, name and location of the merchant who sold the Unit, and product description. This warranty does not cover labor costs for the removal or reinstallation of the Unit. This warranty is non-transferable and does not apply to any Unit that has been modified or used in a manner contrary to its intended purpose, and this warranty does not cover damage to any Unit caused by installation or removal of the Unit. This warranty is void if the Unit has been damaged by accident or unreasonable use, neglect, improper service or other causes not arising out of defects in materials or workmanship. Directed makes no warranty against theft of a vehicle or its contents.

THE FOREGOING WARRANTY IS THE EXCLUSIVE PRODUCT WARRANTY, OTHERWISE, ALL WARRANTIES INCLUDING BUT NOT LIMITED TO EXPRESS WARRANTY, IMPLIED WARRANTY, WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED AND DISCLAIMED TO THE MAXIMUM EXTENT ALLOWED BY LAW, AND DIRECTED NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT ANY LIABILITY IN CONNECTION WITH THE SALE OF THE PRODUCT. DIRECTED HAS ABSOLUTELY NO LIABILITY FOR ANY AND ALL ACTS OF THIRD PARTIES INCLUDING ITS AUTHORIZED DEALERS OR INSTALLERS. SOME STATES DO NOT ALLOW THE LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

LIMITATION OF DAMAGES AND LIABILITY. CONSUMER'S REMEDY IS LIMITED TO REPAIR OR REPLACEMENT OF THE UNIT, AND IN NO EVENT SHALL DIRECTED'S LIABILITY EXCEED THE PURCHASE PRICE OF THE UNIT. IN ANY EVENT, DIRECTED SHALL NOT BE LIABLE FOR ANY DAMAGES INCLUDING, BUT NOT LIMITED TO, ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, LOST PROFITS, LOST SAVINGS, OR, TO THE EXTENT ALLOWED BY APPLICABLE LAW, DAMAGES RESULTING FROM DEATH OR INJURY ARISING OUT OF

© 2005 directed electronics—all rights reserved

OR IN CONNECTION WITH THE INSTALLATION, USE, IMPROPER USE, OR INABILITY TO USE, THE PRODUCT, EVEN IF THE PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OF LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. THE CONSUMER AGREES AND CONSENTS THAT ALL DISPUTES BETWEEN THE CONSUMER AND DIRECTED SHALL BE RESOLVED IN ACCORDANCE WITH CALIFORNIA LAWS IN SAN DIEGO COUNTY, CALIFORNIA.

IMPORTANT NOTE:

This product warranty is automatically void if its date code or serial number is defaced, missing, or altered. This warranty will not be valid unless you have completed the warranty card and mailed it to Directed Electronics. within 10 days after purchase to the address listed on the warranty registration card.

Make sure you have all of the following information from your dealer:

A clear copy of the sales receipt, showing the following:

Date of purchase
Authorized dealer's company name and address
Item number

© 2005 directed electronics—all rights reserved

table of contents

limited lifetime consumer warranty i
remote configurations 3
LCD 2-way configuration 3
standard 4-button configuration 5
what is included 6
important information 6
system maintenance 7
your warranty 8
fcc/id notice 8
caution 9
remote functions 10
LCD 2-way remote standard configuration 10
Standard LCD 2-way icon configuration 12
4-button remote standard configuration 18
LCD 2-way remote operation 19
system signal paging features 19
using your system 20
warning! safety first 20
active arming 22
passive arming 23
warn away® response description 24
triggered response description 25
multi-level security arming 26
arming while driving 27
disarming 28
disarming while driving 28
high security disarm 28
disarming without a remote 29
silent mode 30
panic mode 30
valet mode 31
remote start 32
valet take-over 34
short-run/turbo 35
setting the clock 35
temperature check mode 36
timer mode 36
safety features 37
starter anti-grind circuitry 37
disabling the remote start system 38

© 2005 directed electronics—all rights reserved

over and under rev protection 38
shut down inputs 38
nuisance prevention circuitry 39
24-hour timer mode 40
diagnostics 40
arming diagnostics 41
disarming diagnostics 41
system status chirps 42
table of zones 42
interpreting zone diagnostics 43
code hopping 44
high frequency 44
owner recognition 45
rapid resume logic 45
power saver mode 46
programming options 46
security & convenience expansions 49
glossary of terms 51

© 2005 directed electronics—all rights reserved

remote configurations

➜ LCD 2-way configuration

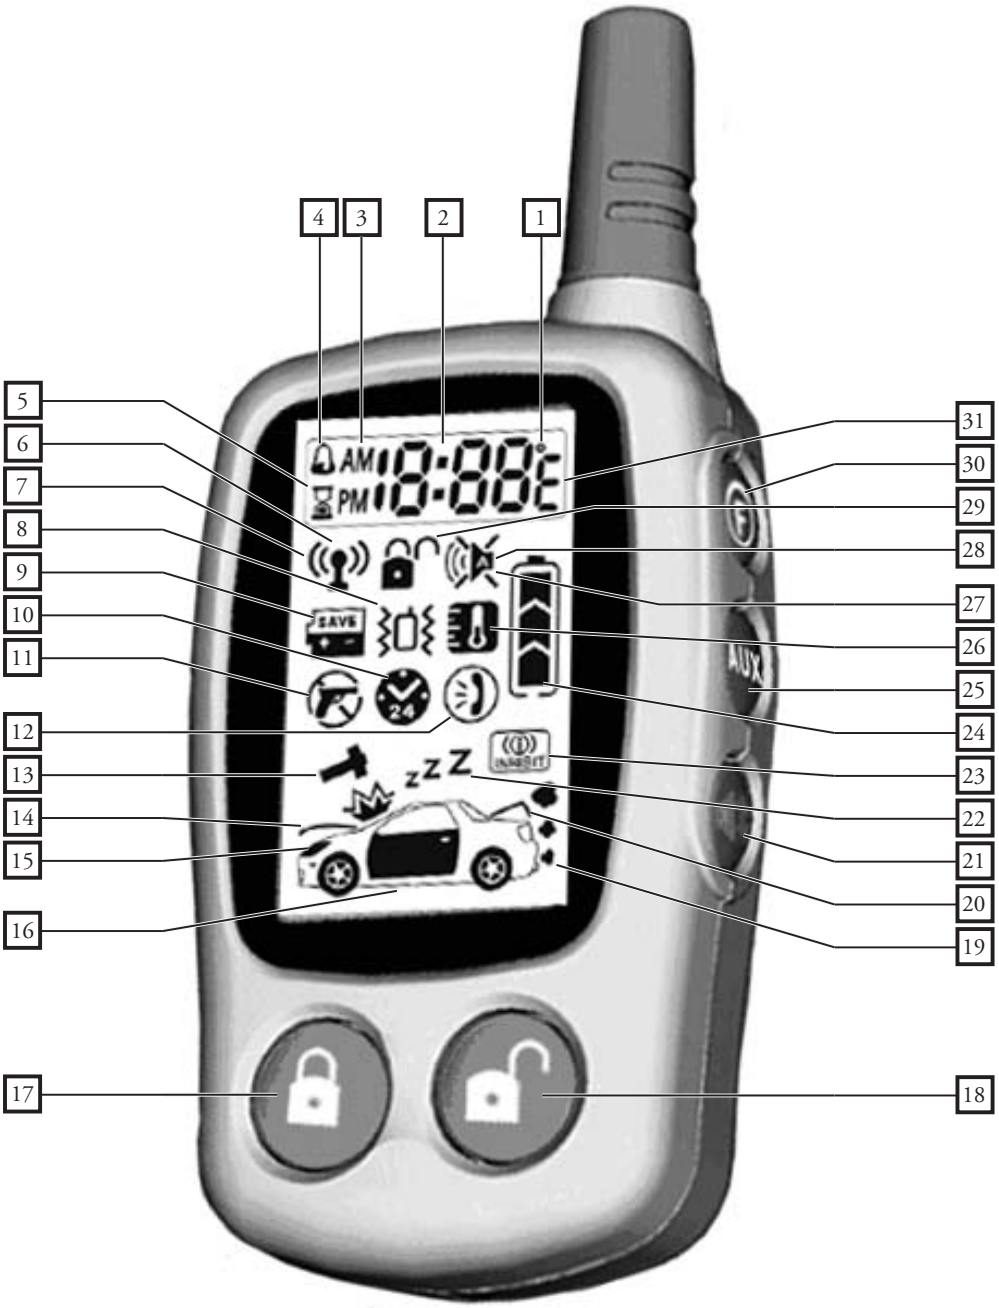

© 2005 directed electronics—all rights reserved

1	Vehicle Interior Temperature Indicator
2	Numeric Display
3	AM/PM Indicator
4	Alarm Clock Mode Indicator
5	Timer Function Indicator
6	Transmit Range Indicator
7	Transmission Indication
8	Vibrate/Beep Mode Indicator
9	Power Saver Mode Indicator
10	Remote Start Timer Mode Indicator
11	No Function
12	Vehicle Page Mode Indicator
13	Full Trigger Shock Sensor Indicator
14	Hood/Trunk Open or Trigger Indicator
15	Parking Light Indicator
16	Door Open or Trigger Indicator
17	Arm/Lock Button
18	Disarm/Unlock Button
19	Remote Start Indicator
20	Hood/Trunk Open or Trigger Indicator
21	Remote Start Button
22	Valet Mode Indicator
23	Remote Start Safety Shutdown Indicator
24	Battery Level Indicator
25	Auxiliary Button
26	Temperature-Controlled Remote Start Indicator
27	Silent Arm/Disarm Mode Indicator
28	Full Trigger Alert Indicator
29	Arm/Disarm Indicator
30	Function Button
31	Celsius/Fahrenheit Indicator

© 2005 directed electronics—all rights reserved

➜ standard 4-button configuration

controls the **Arm** and **Panic** On/Off function.

controls the **Disarm** and **Panic** Off function.

controls **Silent Mode™** and **Auxiliary** channel **2** output.

controls the **Remote Start** function.

and pressed together control the **Timer** mode.

and pressed together control **Turbo/Short Run**.

and pressed together control channel **4** output.

and pressed together control channel **5** output.

and and pressed together display interior car temperature.

© 2005 directed electronics—all rights reserved

what is included

- Control module
- ASK transceiver/antenna
- One 4-button remote
- One 2-way LCD remote
- Stinger™ DoubleGuard® 2-stage shock sensor
- Revenger™ Soft Chirp™ 6-tone programmable siren
- Status LED indicator light
- Push-button Valet switch
- Your warranty registration
- Shut-down toggle switch

important information

Congratulations on the purchase of your combination remote start alarm system. Due to the complexity of this system, it must be installed by an authorized dealer only. Installation of this product by anyone other than an authorized dealer voids the warranty. All dealers are provided with a preprinted dealer certificate to verify authorization.

By carefully reading this Owner's Guide prior to using your system, you will maximize the use of this system and its features. You can print additional or replacement copies of this manual by accessing our web site at www.directed.com.

© 2005 directed electronics—all rights reserved

➜ system maintenance

The system requires no specific maintenance other than battery replacement for the remotes.

LCD 2-Way Remote Battery Replacement

The 2-way remote is powered by a 1.5V AAA battery. The Battery Level indicator has three level indicators that serve as a visual indication of battery charge. When the battery reaches a low charge level that requires replacement, the transceiver will generate a single notification chirp, and the Battery Level indicator will flash continuously.

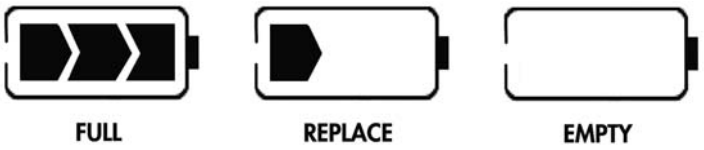

To replace the battery, gently pull the battery cover release tab, then slide the door down to expose the battery and remove the expired battery. Place the new battery into the transceiver observing the correct polarity. When power is returned the transceiver will light all icons in the LCD and generate all beeper tones once.

4-Button Remote Battery Replacement

Your remote is powered by a small, lightweight 3-volt lithium battery (CR2032) that will last approximately one year under normal use. When the battery begins to weaken, operating range will be reduced and the LED on the remote will dim.

© 2005 directed electronics—all rights reserved

➜ your warranty

Your warranty registration must be completely filled out and returned within 10 days of purchase. Your product warranty will not be validated if your warranty registration is not returned. Make sure you receive the warranty registration from your dealer. It is also necessary to keep your proof of purchase, which reflects that the product was installed by an authorized dealer.

➜ fcc/id notice

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation.

Directed Electronics, Inc. **544 Series**

Tested to Comply with FCC Standards

Directed Electronics, Inc. **477T Series**

Tested to Comply with FCC Standards

© 2005 directed electronics—all rights reserved

Directed Electronics, Inc. **474V/P/S Series**

Tested to Comply with FCC Standards

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

➜ caution

This product is designed for fuel injected, automatic transmission vehicles only. Use of this product in a standard transmission vehicle is dangerous and contrary the product's intended use.

© 2005 directed electronics—all rights reserved

The remote buttons are used to send commands to the system. The descriptions below reflect the standard configuration for this system. The buttons can be custom configured for the user's specific needs by the installer.

➜ LCD 2-way remote standard configuration

LCD 2-way button configuration

Button

The System Arm/Lock and Multi-Level Security Arming functions are controlled by pressing this button.

Button

The System Disarm/Unlock and High Security Disarm functions are controlled by pressing this button.

Button

Channel 2 output is controlled by pressing and holding this button for two seconds.

Button

The panic feature is controlled by pressing and holding this button for three seconds. Press again to disable panic mode.

Button

The LCD backlighting will turn on when pressed for less than one second; when held for more than five seconds the transceiver will enter adjustment mode allowing the setting of the clock, timer mode, and audible melody selection. For more information, please refer to the *Function Button Configurations* section of this guide.

© 2005 directed electronics—all rights reserved

Button

The remote start function of the system is controlled by pressing this button twice. To stop the remote start press this button for one second. Also, stepping on the brake pedal will cancel the remote start.

Button

When pressed and held this button activates the second unlock or other accessory.

and **Buttons**

When pressed simultaneously these buttons activate remote start timer mode, engaging the remote start function every 24 hours.

, **and** **Buttons**

When pressed simultaneously these buttons display the internal temperature of the vehicle on the LCD.

and **Buttons**

When pressed simultaneously with the system armed, the system enters temperature auto start mode and automatically remote starts the vehicle if the temperature inside the vehicle drops below 0 degrees Fahrenheit.

> **note:** Disarming the system while in temperature auto start mode will cause the system to exit this mode.

and **Buttons**

The numeric display toggles between the time of the day and the alarm clock when these buttons are pressed simultaneously.

© 2005 directed electronics—all rights reserved

and Buttons

Press these buttons simultaneously to activate the parking timer. Each additional press will toggle through the available options (10 min., 20 min., 30 min., 1 hour, 1.5 hours, 2 hours, and off).

and Buttons

When pressed simultaneously these buttons toggle between beep notification and vibrate notification.

and Buttons

When pressed simultaneously these buttons activate battery saver mode, which will drop power consumption on the transceiver battery to zero when the alarm is inactive or disarmed.

➜ Standard LCD 2-way icon configuration

Icon

The vehicle interior temperature icon displays the temperature of the inside of the vehicle when prompted.

Icon

The numeric display icon will show the hours and minutes.

Icon

The AM/PM icon indicates the time before or after noon.

Icon

The alarm clock mode icon indicates that the alarm clock mode is active.

© 2005 directed electronics—all rights reserved

Icon

The timer function icon flashes during timed functions including parking timer.

Icon

The transmit range indicator icon stays visible as long as the system is within operating range.

Icon

The remote transmission indicator icon displays when the transceiver is transmitting a signal.

Icon

The vibrate/beep mode icon appears when the transceiver is set to vibrate mode.

Icon

The power saver mode can be turned on or off with the transceiver. This icon displays the status.

Icon

The remote start timer mode icon indicates the 24-hour autostart feature is active and automatically remote starts 24 hours from the time activated.

Icon

The VRS mode icon has no function.

Icon

The vehicle page mode icon displays when the alarm module is paging the transceiver.

© 2005 directed electronics—all rights reserved

Icon

The full trigger shock sensor icon indicates that the shock sensor has been triggered by a hard shock.

and **Icons**

The hood/trunk open or trigger icon illuminates when the hood or trunk trigger has been activated or the hood or trunk is open, and bypasses those zones until it is closed.

Icon

The parking light icon will flash twice when armed or disarmed. The icon also flashes during WarnAway and at the beginning and end of remote start cycles.

Icon

The door open or trigger icon illuminates when the door trigger has been activated or the door is open, and bypasses that zone until it is closed.

Icon

The remote start icon indicates when the vehicle is remotely started.

Icon

The Valet mode icon appears when the system is in Valet mode.

Icon

The remote start safety shut down icon indicates the vehicle may be in gear or other unsafe condition inhibiting remote start operation.

© 2005 directed electronics—all rights reserved

Icon

The battery level icon indicates the level of power remaining in the battery.

Icon

The temperature-controlled remote start icon indicates that the system has entered the temperature remote start mode and automatically starts the vehicle if the temperature of the vehicle drops below 0 degrees Fahrenheit.

Icon

The silent arm/disarm icon appears when the system has been armed or disarmed in the silent mode.

Icon

The full trigger alert icon illuminates when the security system has been triggered by a heavy impact, door trigger violation, optional sensor violation, or a hood/trunk trigger.

Icon

The arm icon appears when the vehicle is armed and locked. The disarm icon appears when the vehicle is disarmed and unlocked.

Icon

Celsius/Fahrenheit icon indicates the current mode of the displayed temperature either in Celsius or Fahrenheit.

© 2005 directed electronics—all rights reserved

Standard LCD 2-way button functions

Function	Button	Icon	Audible Indication
Lamp On (10 sec)			
Power-Saver Mode*	+	SAVE	Melody
Beep/Vibrate Mode	+		4 Vibrations/ 1 Beep
Time Adjust Mode (hour)**	for 5 Seconds	8:88	2 Beeps
Time Adjust Mode (min)**	1 Time***	8:88	
Alarm Clock Set Mode (hour)**	2 Times***	8:88	
Alarm Clock Set Mode (min)**	3 Times***	8:88	
Alarm Clock Music or Power on Music Selection**	4 Times***	8	5 Selections 1/2/3/4/5
Alarm Clock Adjust Mode (on/off)**	5 Times***	ON OFF	
Timer Count Down Adjust Mode (hour)**	6 Times***	8:88	
Timer Count Down Adjust Mode (min)**	7 Times***	8:88	
Timer Count Down Ending Melody Selection 1**	8 Times***	8	5 Selections 1/2/3/4/5
RS Timer Count Down Mode (on/off)*	9 Times***	ON OFF	

© 2005 directed electronics—all rights reserved

Remote Start On Melody Selection 2	10 times***	18:88	5 Selections 1/2/3/4/5
10 Min Parking Count Down Mode	+ 1 Time	0: 10	Melody
20 Min Parking Count Down Mode	+ 2 Times	0:20	Melody
30 Min Parking Count Down Mode	+ 3 Times	0:30	Melody
60 Min Parking Count Down Mode	+ 4 Times	1:00	Melody
90 Min Parking Count Down Mode	+ 5 Times	1:30	Melody
120 Min Parking Count Down Mode	+ 6 Times	2:00	Melody
Parking Count Down Off Mode	+ 7 Times	0:00	Melody
Alarm Clock Mode On/Off****	+ AUX	18:88	Melody
Celsius/Fahrenheit Select Mode	+ AUX +	F or C	Melody

* This function will operate in the disarmed state only.

** The AUX button will advance the selection upward. The button will advance the selection downward or select the off setting.

*** Be sure to hold down for five seconds prior to entering timer clock adjust mode operation.

**** Press once to have the alarm clock on. Press twice to have the alarm clock off.

The remote will revert to normal operation from the set mode when 15-seconds has elapsed without a button entry.

© 2005 directed electronics—all rights reserved

➜ 4-button remote standard configuration

Button

The arming is controlled by pressing this button. The panic alarm is triggered by pressing and holding this button. Press this button again to cancel the panic alarm.

Button

The disarming function is controlled by pressing this button.

Button

Silent Mode™ and an optional auxiliary function are controlled by this button. (Silent Mode works by pressing this button for less than one second before arming or disarming. An optional auxiliary function, such as trunk release, can be controlled by pressing and holding this button for 1.5 seconds.)

The auxiliary output controls _____.

Button

The remote start function of your system is controlled by pressing this button.

and **Buttons**

An optional auxiliary convenience or expansion function that you have added to your system can be activated by pressing these buttons simultaneously.

The auxiliary output controls _____.

© 2005 directed electronics—all rights reserved

and **Buttons**

An optional auxiliary convenience or expansion function that you have added to your system can be activated by pressing these buttons simultaneously.

The auxiliary output controls _____.

and **Buttons**

The remote start timer mode is controlled by pressing these buttons simultaneously.

and **Buttons**

The short-run turbo mode is activated when these buttons are pressed simultaneously.

LCD 2-way remote operation

The remote start system operates at 434 MHz and incorporates Directed's proprietary A.S.K. out-board two-way transceiver. The high frequency combined with Binary Data communication achieves superior range with two-way communication.

➜ system signal paging features

A page is the signal the control module sends to the transceiver as confirmation of receipt of a command or alarm system status.

When the transceiver receives a page it will generate a page notification to the user (notifications are audible beeps or the remote vibrates) and the LCD icons will display the current system status.

© 2005 directed electronics—all rights reserved

Command Page

When a command (arm/disarm, remote start, or auxiliary channel) from the transceiver is sent and received, the system will send a command page back to confirm receipt.

Page Recognition Mode

The transceiver will leave a zone icon illuminated when it has received a triggered response and will wait for violation recognition. Press any button on the transceiver, the LCD information and alarm page alerts will be cleared.

> **note:** The transceiver buttons will not send a command to the system until the alarm page is cleared.

using your system

➜ warning! safety first

The following safety warnings must be observed at all times:

- Due to the complexity of this system, installation of this product must only be performed by an authorized Directed dealer.
- When properly installed, this system can start the vehicle via a command signal from the remote control. Therefore, never operate the system in an enclosed area or partially enclosed area without ventilation (such as a garage). When parking in an enclosed or partially enclosed area or when having the

© 2005 directed electronics—all rights reserved

vehicle serviced, the remote start system must be disabled using the installed toggle switch. It is the user's sole responsibility to properly handle and keep out of reach from children all remote controls to assure that the system does not unintentionally remote start the vehicle. **THE USER MUST INSTALL A CARBON MONOXIDE DETECTOR IN OR ABOUT THE LIVING AREA ADJACENT TO THE VEHICLE. ALL DOORS LEADING FROM ADJACENT LIVING AREAS TO THE ENCLOSED OR PARTIALLY ENCLOSED VEHICLE STORAGE AREA MUST AT ALL TIMES REMAIN CLOSED.** These precautions are the sole responsibility of the user.

- Use of this product in a manner contrary to its intended mode of operation may result in property damage, personal injury, or death. (1) Never remotely start the vehicle with the vehicle in gear, and (2) Never remotely start the vehicle with the keys in the ignition. The user must also have the neutral safety feature of the vehicle periodically checked, wherein the vehicle must not remotely start while the car is in gear. This testing should be performed by an authorized Directed dealer in accordance with the Safety Check outlined in the product installation guide. If the vehicle starts in gear, cease remote start operation immediately and consult with the authorized Directed dealer to fix the problem.
- After the remote start module has been installed, contact your authorized dealer to have him or her test the remote start module by performing the Safety Check outlined in the

© 2005 directed electronics—all rights reserved

product installation guide. If the vehicle starts when performing the Neutral Safety Shutdown Circuit test, the remote start unit has not been properly installed. The remote start module must be removed or the installer must properly reinstall the remote start system so that the vehicle does not start in gear. All installations must be performed by an authorized Directed dealer. OPERATION OF THE REMOTE START MODULE IF THE VEHICLE STARTS IN GEAR IS CONTRARY TO ITS INTENDED MODE OF OPERATION. OPERATING THE REMOTE START SYSTEM UNDER THESE CONDITIONS MAY RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY. YOU MUST IMMEDIATELY CEASE THE USE OF THE UNIT AND SEEK THE ASSISTANCE OF AN AUTHORIZED DIRECTED DEALER TO REPAIR OR DISCONNECT THE INSTALLED REMOTE START MODULE. DIRECTED WILL NOT BE HELD RESPONSIBLE OR PAY FOR INSTALLATION OR REINSTALLATION COSTS.

➜ active arming

You can arm the system by pressing of your remote for one second. When the system arms, you will hear a short siren sound, or chirp, and see the parking lights flash once. If the power door locks are controlled by the system, the doors will also lock. While the system is armed, the status LED will flash approximately once per second, indicating that the system is actively protecting your vehicle. If you hear a second chirp after arming and note that the

© 2005 directed electronics—all rights reserved

status LED is flashing in groups, see the Diagnostics Section of this guide. This extra chirp is called Bypass Notification, which indicates that a security sensor or switch has been bypassed and the system is not monitoring that area (zone) of the vehicle.

➜ passive arming

The system can be programmed to arm itself automatically (called passive arming). If the system is programmed for passive arming, it will automatically arm 30 seconds after the ignition is turned off and the system detects that you have left the vehicle by opening and closing a door. Whenever the system is in its 30-second passive arming countdown, the status LED will flash twice as fast as it does when the system is armed. At the 20-second point of the countdown, the siren will chirp to indicate that the system is about to arm. At the 30-second point, the parking lights will flash to indicate that the system is armed.

> **note:** If any protected entry point (such as a door or a switch-protected trunk or hood) is open, the system will not passively arm (unless forced passive arming is programmed on. See Programming Options section.) Additionally, each time a sensor is triggered during the arming countdown, the 30-second countdown starts over.

When armed your vehicle is protected as follows:

- Light impacts trigger the Warn Away® signal. When triggered, the siren chirps and the parking lights flash for a few seconds.
- Heavy impacts trip a Triggered Sequence. The sequence consists of the siren sounding continuously and the parking lights flashing for a pre-programmed period, which can range in duration from 1 to 180 seconds.

© 2005 directed electronics—all rights reserved

- If a door is opened, the system will immediately start chirping the siren and flashing the parking lights. Three seconds later, the siren output changes to a continuous blast. This progressive response gives you time to disarm the system with your remote if you inadvertently open the door while the system is armed, while still providing instant response (even if the door is immediately closed).
- Turning on the ignition key will trip the same progressive response as opening a door.
- The optional starter kill prevents the vehicle's starter from cranking.

➜ warn away® response description

A Warn Away® Response consists of an alarm page along with the responses described below.

- **Shock Sensor** - Light impacts to the vehicle will flash the vehicle lights and chirp the siren for a few seconds.
- **Remote Control Notification** - Ten quick beeps (or one vibration).
- **Remote Control LCD** - The full trigger alert icon (28) will dimly illuminate for two seconds
- The transceiver will enter Page Recognition Mode and operate alarm page alerts.

> **note:** Icons 13 and 14 represent alarm system zone inputs. For more information about icons and the zones they represent refer to the *Standard Remote Configurations* section.

© 2005 directed electronics—all rights reserved

➜ triggered response description

A Triggered Response can be activated by any of the triggers listed below and consists of an alarm page along with the response described for each trigger. The default Triggered Response duration is 30 seconds but can be programmed from 1-180 seconds by your installer with the Directed Bitwriter®.

- **Sensor Trigger** - Heavy impacts to the vehicle will instantly sound the siren and flash the lights for the programmed duration and report Zone 2.
- **Door Trigger** - If a door is opened the siren will chirp for three seconds, then the siren will sound and the lights will flash for the programmed duration and report Zone 3. The three seconds allow the user time to disarm the system with a minimum of noise should a door be opened inadvertently while the system is armed.
- **Hood Trigger** - Opening the hood will sound the siren, flash the lights for the programmed duration, and report Zone 1.
- **Trunk Trigger** - Opening the trunk (if connected) will instantly sound the siren and flash the lights for the programmed duration and report Zone 4.
- **Ignition Trigger** - If the ignition is turned on the siren will chirp for three seconds, then the siren will sound and the lights will flash for the programmed duration and report Zone 5.

When a Triggered Response is activated the transceiver will:

- Repeat four quick beeps (or vibrate) for 15 seconds.
- The full trigger alert icon (28) will turn on for 15 seconds.

© 2005 directed electronics—all rights reserved

- The zone icons will turn on and remain on until a transceiver button is pressed, clearing the page alert.
- The transceiver will enter page recognition mode and generate alarm page alerts.

> **note:** Icons 13, 14, 16, and 20 represent alarm system triggered sequence zone inputs. For more information about icons and the zones they represent refer to the *Standard Remote Configurations* section.

➜ multi-level security arming

Multi-Level Security Arming allows you to select which of the system's inputs or sensors will be active and which will be bypassed when the system is armed. (See *Table of Zones* section of this guide.) Pressing (only in Standard Configuration) again within five seconds of arming the system will activate the Multi-Level Security feature. Each time is pressed again, a different security level is selected. The different security levels are selected as follows:

- Press once: The siren chirps once. The system is armed.
- Press a second time within five seconds: The siren chirps twice followed by a long chirp. Zone 2 is now bypassed.
- Press a third time within five seconds: The siren chirps three times followed by a long chirp. Zone 4 is now bypassed.
- Press a fourth time within five seconds: The siren chirps four times followed by a long chirp. Zones 2 and 4 are now bypassed.

© 2005 directed electronics—all rights reserved

➤ Press a fifth time within five seconds: The siren chirps five times followed by a long chirp. All input zones, except the ignition, are now bypassed.

> **note:** Multi-Level Security Arming only applies to a single arming cycle. Once the system is disarmed and then re-armed, all the zones will be active again.

➜ arming while driving

Your security system can be armed while driving the vehicle! Simply press on the remote for two seconds while the vehicle is running. The siren will chirp once to indicate that the security system is armed, and then once more to indicate that the ignition is on. The system will not respond to any input except the door triggers, and the starter kill relay (if installed) will not be activated. Once you have arrived at your destination, the system will disarm when the ignition is turned off. The siren will chirp twice and the LED will then stop flashing. The system can also be disarmed at any time by pressing .

The LCD 2-way remote will beep once (or vibrate), and the arm icon (29) will be displayed on the LCD.

> **note:** If the transceiver received a Warn Away® or triggered response page while armed, the first press of the unlock button will clear the page alert. A second press will turn the siren off, and a third press will disarm the system.

© 2005 directed electronics—all rights reserved

➜ disarming

To disarm the security system, press . You will hear two chirps, and the parking lights will flash twice. If the power locks are controlled by the system, the doors will also unlock. The siren chirping either four or five times when disarming indicates Tamper Alert, which is described in the Diagnostics Section of this guide.

➜ disarming while driving

Press on the remote or simply turn off the ignition to disarm the system. The lights will flash twice, the doors will unlock, the siren will chirp twice, and the status LED will turn off. The 2-way remote will beep twice (or vibrate). The disarm icon (29) will be displayed on the LCD.

➜ high security disarm

This security system offers High Security Disarm. High Security Disarm is a feature that makes it possible to silence and reset the system while it is triggering, without disarming the system. If the system is triggered and the siren has been sounding for longer than six seconds, pressing on the remote will stop the trigger and return the unit to the armed state. The system will not disarm, but rather reset. This prevents you from disabling the system should you wish to disarm it without visually checking the vehicle. Pressing after resetting the system will disarm the system; pressing this button during the first six

© 2005 directed electronics—all rights reserved

seconds of the triggered sequence will disarm the security system immediately. The six second timer is provided for your convenience, in case the system is accidentally triggered.

➜ disarming without a remote

If your remote is lost or damaged, you can manually disarm your vehicle security system. To disarm the system without a remote, you must have the vehicle's ignition key and know where the Valet button is located. Be sure to check with your installer at the time of installation for both the location and the preset response (1-5 presses) of the Valet button.

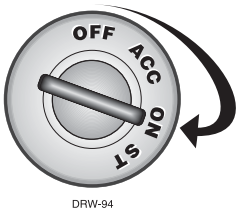

DRW-94

To disarm the security system, turn the ignition to the ON position. Press the Valet button the preset number of times (one to five times) within 15 seconds. After five seconds, the system will disarm. If the system does not disarm, you may have waited too long; turn the ignition off and on and try again.

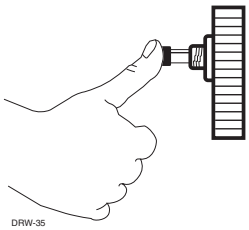
DRW-35

Location of Valet Button_____

Number of Presses_____

> **important!** The Valet button can be programmed to respond to 1-5 presses for the disarm function. You must check with the installer to verify the programming for your individual unit.

© 2005 directed electronics—all rights reserved

➜ silent mode

To temporarily turn off the arm or disarm chirps, use Silent Mode™. Simply press AUX for less than one second before arming or disarming, and the confirmation chirp(s) will be eliminated for that one operation only. If you want the arm/disarm chirps turned off permanently, your dealer can do this for you.

> **note:** The Warn Away® response to lighter impacts is bypassed if the system is armed using Silent Mode. This ensures that no chirps will be emitted by the siren in an area you want chirp-free. The system is still fully capable of triggering. Only the Warn Away® response is bypassed.

➜ panic mode

If you are threatened in or near your vehicle, you can attract attention by triggering the system with your remote. Just press for two seconds, and you will enter Panic Mode. The siren will sound and the parking lights will flash for the programmed siren duration. To stop Panic Mode at any time, press on the remote again.

> **note:** Once panic mode has been entered, the siren will sound for the programmed duration.

The LCD 2-way remote will beep (or vibrate) continuously when the system enters panic mode. The 2-way remote will not generate a page notification when panic mode is exited.

© 2005 directed electronics—all rights reserved

➜ Valet mode

You can prevent your security system from automatically arming and triggering by using Valet Mode. This is very useful when washing the vehicle or having it serviced. In Valet Mode, the security system will not arm, even with the remote, but all convenience functions (door locks, trunk release, etc.) will continue to work normally.

To enter or exit Valet Mode:

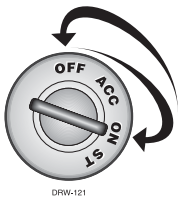

1. Turn the ignition on.
2. Turn the ignition off.
3. Press and release the Valet button within 10 seconds.

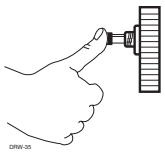

The status LED will light solidly if you are entering Valet Mode, and it will go out if you are exiting Valet Mode.

To enter or exit Valet Mode using the remote:

Steps 2 through 3 must be quickly and smoothly completed.

1. Open any vehicle door.
2. Press .
3. Press .
4. Press again.

The status LED will light solidly if you are entering Valet Mode, and it will go out if you are exiting Valet Mode.

© 2005 directed electronics—all rights reserved

➜ remote start

This feature allows you to remotely start and run your vehicle for a programmable period of time. This makes it possible to warm up the engine, as well as adjust the interior temperature of the vehicle with the climate control system. If interior heating or cooling is desired, the climate controls must be preset, and the fan blower must be set to the desired level prior to remote starting the vehicle.

> **important!** (1) Never remote start your vehicle when the keys are in the ignition, except when performing Valet Take-Over, and (2) Never start the vehicle if it is not in either PARK or NEUTRAL.

To remote start the vehicle:

1. Press on the remote twice within 3 seconds.
2. The parking lights will flash to confirm that the vehicle will attempt to start.
3. A remote start page notification with a unique melody (or vibration) will be generated and the LCD will display the remote start (19) icon as long as the vehicle is running.

> **note:** The 2-way remote will generate a Page Notification with a different unique two-tone beep (or vibrate) and the remote start (19) icon will turn off when the remote start shuts down.

4. In gasoline vehicles, the engine will start 4 seconds after the parking lights flash. In diesel vehicles, the engine will start when the WAIT-TO-START indicator on the vehicle's dash goes out.

© 2005 directed electronics—all rights reserved

5. Once the vehicle has started, it will run for the pre-programmed period of time (either 12, 24, or 60 minutes - see Programming Options section of this guide) or until a shutdown input is triggered.

> **important!** It is unsafe to operate a vehicle's motor in a garage or other closed off area. Breathing the exhaust from the vehicle is hazardous to your health. Never activate the remote start in an enclosed space.

When you are ready to drive the vehicle:

1. Insert the ignition key and turn it to the ON (not START) position.



2. Press the brake pedal.

> **note:** If the brake pedal is pressed before the key is in the ON position, the engine will shut down.

While the vehicle is running during remote start operation, the system will monitor the vehicle and will automatically shut down the engine if the system receives any of the following shutdown inputs:

- The brake pedal is pressed.
- The hood is opened.
- The shutdown toggle switch is put into the OFF position.
- The pre-programmed run time (12, 24, or 60 minutes) has elapsed.
- Remote button is pressed twice within 3 seconds.

The LCD 2-way remote will generate a page notification with a

© 2005 directed electronics—all rights reserved

unique melody (or vibrate) and the remote start icon (19) will turn off when the remote start shuts down.

➜ valet take-over

The Valet Take-Over feature allows the vehicle to remain running after the key has been removed from the ignition. This feature is useful for occasions when you wish to exit and lock the vehicle for short periods of time, but would like to leave the motor running and the climate controls on.

To perform Valet Take-Over:

1. Before turning off the engine, press and release twice within 3-seconds on the remote (or press and release the optional momentary switch). Then wait five seconds. A remote start page notification with a unique melody (or vibration) will be generated and the LCD 2-way remote will display the remote start icon (19) as long as the vehicle is running. Then wait three seconds.
2. Turn the ignition key to the OFF position. (The engine will stay running.)
3. The engine will run until the pre-programmed time elapses or a shut-down input is received. (See the previous *Remote Start* section for a complete list of shut-down inputs.)

> **note:** This feature will not work if the brake pedal is being pressed.

© 2005 directed electronics—all rights reserved

➜ short-run/turbo

Short run turbo mode keeps the engine running after arriving at you destination for a programmable period of 1, 3, 5 or 10 minutes. This allows the system's timer to conveniently cool down the turbo after you have left the vehicle.

To activate:

1. Park the vehicle and set parking brake.

2. Remove your foot from the brake pedal and leave the engine running.

3. Press and release the and buttons at the same time.

4. The lights will flash to indicate the remote start has entered short run turbo mode.

5. Turn off the key, the engine will keep running.

6. Exit and secure the vehicle.

7. The engine will turn off after the programmed run time.

➜ setting the clock

To set the clock press and hold for five seconds, the transceiver will chirp twice and the hour selection will start flashing. Immediately press to advance the hour selection or to reverse the hour selection. Once the correct hour is displayed press again and the minute selection will start flashing.

© 2005 directed electronics—all rights reserved

Then press AUX to advance the minute selection or to reverse the minute selection. Once the correct time is displayed simply stop pressing any buttons for 15 seconds and the transceiver will automatically exit the clock mode.

➜ temperature check mode

This system will report the interior temperature of your vehicle with the press of three buttons. To activate the temperature display press , and simultaneously and then release. You will hear a melody and the interior temperature will appear on the LCD screen for five seconds.

> **note:** If the ignition is on, the temperature check will not work.

➜ timer mode

By pressing the remote and buttons the parking lights will flash 4 times and then start the vehicle and run for the set duration. The remote start can be shut off by the remote by pressing the remote start button and remain in timer mode, but if any other shut down zones or the ignition becomes active the timer mode will cancel.

1. Press Timer mode buttons.
2. The vehicle will confirm with 4 parking light flashes.
3. A 1-second delay will start.

© 2005 directed electronics—all rights reserved

4. The system will start the car and will run for the specified duration, unless shut down by the remote start button . If shut down with the remote start button the system will remain in timer mode.

5. The system will start every 3 hours until canceled by the brake, hood, or neutral safety shut-down wires.

> **important!** Timer Mode should be used only in open areas. Never start and run the vehicle in an enclosed space such as a garage or carport.

To exit timer mode, turn the ignition switch on any time the engine is running. The parking lights will flash 4 times, indicating timer mode has been exited.

safety features

This system has several important safety features to ensure proper operation of the motor and prevent accidental damage to the engine or its components.

➜ starter anti-grind circuitry

Whenever the vehicle is remote started, advanced anti-grind circuitry prevents the starter from engaging, even if the key is turned to the start position. This prevents damage to the starter motor if the key is turned to the start position during remote start operation.

© 2005 directed electronics—all rights reserved

➜ disabling the remote start system

This feature allows your system's remote start unit to be temporarily disabled to prevent the vehicle from being remote started accidentally. This feature is useful if the vehicle is being serviced or stored in an enclosed area. To disable the remote start, move the shutdown toggle switch to the OFF position. The switch can be installed in a location of your choice. Check with your installer for recommended locations.

Location of Shutdown Switch_____

➜ over and under rev protection

The system monitors the engine speed and will automatically shut the engine off if the RPMs rise above or fall below the programmed levels. This feature prevents damage to the motor due to fuel delivery system failures or other problems which may cause the engine to race.

> **note:** The system uses an input from the vehicle to sense engine speed. This wire must be connected in order for over and under rev protection to work.

➜ shut down inputs

This security system uses several inputs to shut down the remote start operation of the motor or prevent remote start if certain inputs are active. The two most important are hood and brake inputs. The hood input will prevent the motor from starting, as well as shut it down, any time the hood is opened. The brake

© 2005 directed electronics—all rights reserved

pedal will shut down the motor at any time during remote start operation, as well as preventing the remote start from activating while it is being pressed.

➜ nuisance prevention circuitry

Your system has Directed's Nuisance Prevention® Circuitry (NPC). It prevents annoying repetitive trigger sequences due to faulty door pin switches or environmental conditions such as thunder, jackhammers, airport noise, etc.

Example

If the alarm triggers three times within a 60-minute period and each time the same sensor or switch triggers the alarm, NPC will interpret those triggers as false alarms. After the third trigger, NPC ignores, or bypasses, that sensor or switch (along with any other sensors or switches sharing the same zone) for 60 minutes.

If the bypassed sensor tries to trigger the security system while it is being bypassed, the 60-minute bypass period will start over. This ensures that a sensor that is continually being triggered will remain bypassed.

The vehicle doors are protected by NPC differently. If your security system is triggered by an open door for three full cycles, the system will bypass the doors until the trigger ceases.

© 2005 directed electronics—all rights reserved

note: Arming and disarming the system does not reset this function! The only ways to reset a bypassed zone are for it to not trigger for 60 minutes, or to turn on the ignition. If testing your system, it is important to remember that the NPC programming can cause zones to be bypassed and appear to stop working. If five chirps are heard when disarming, NPC has been engaged. If you wish to clear the NPC memory, turn the ignition on.

24-hour timer mode

To enter timer mode, press and simultaneously. The 2-way remote will produce a melody and the clock indicator will appear on the remote's LCD. Once in Timer Mode, the system will remote start every 24 hours. Repeat this procedure to turn Timer Mode off.

diagnostics

The microprocessor at the heart of your system is constantly monitoring all of the switches and sensors connected to it. It is designed to detect any faulty switches and sensors and prevents them from disabling the entire system. The microprocessor will also record and report any triggers that occurred during your absence. Refer to the *System Status Chirps* and *Table of Zones* sections of this guide for diagnostic information.

© 2005 directed electronics—all rights reserved

➜ arming diagnostics

If the security system is armed at the same time that an input is active (such as a door opening or sensor triggering), you will hear one siren chirp to indicate arming and a second siren chirp to indicate Bypass Notification. A Bypass Notification chirp means that the security system ignores the input that was active when the system was armed, until that input ceases. Three seconds after that input ceases, the security system will resume normal monitoring. For example, if your vehicle has an interior light exit delay and you arm your security system before the interior light turns off, you may hear a second Bypass Notification chirp. Once the light turns off, however, the security system resumes normal monitoring.

> **note:** Bypass Notification does not occur when the system is in Silent Mode or if the notification chirps have been programmed off by the installer.

➜ disarming diagnostics

Extra chirps that are heard when disarming the system are the Tamper Alert. If four chirps are heard when disarming the system, then the security system was triggered in your absence. If five chirps are heard when disarming the system, a zone was triggered so many times that the Nuisance Protection® Circuitry has bypassed that zone. In either case, the status LED will indicate which zone was involved (see *Table of Zones* section). The security system will retain this information in its memory and chirp four or five times each time it is disarmed, until the next time that the ignition is turned on.

© 2005 directed electronics—all rights reserved

➜ system status chirps

The siren will chirp when arming/disarming the system. The pattern of chirps will audibly report the system's status as described below.

Action	Number of Chirps	Description
Arm	1	System armed
Arm	1 (3-second delay), 1	System armed with Bypass Notification
Disarm	2	System disarmed
Disarm	4	System disarmed with Tamper Alert
Disarm	5	System disarmed NPC active

➜ table of zones

A zone is represented by the number of LED flashes used by the system to identify a particular type of input. Standard input assignments are listed in the following table, along with spaces to write in any optional sensors or switches that have been installed.

© 2005 directed electronics—all rights reserved

ZONE (Number of LED Flashes)	DESCRIPTION	DEALER-INSTALLED OPTIONS
1	Trunk Pin	
2	Instant trigger - a heavier impact detected by the shock sensor	
3	Door switch trigger	
4	Instant trigger - for optional sensors	
5	Ignition trigger	
6	Hood Pin	

➜ interpreting zone diagnostics

Warn Away responses are not reported by arming or disarming diagnostics. If you receive a Bypass notification when arming or a Tamper Alert notification when disarming, look at the LED. Active or triggered zones will be indicated by a pattern of blinks by the LED.

Example

If zone 3 was active or triggered, the LED will blink three times with a two-second pause. Then it will blink three times again, and repeat until the ignition is turned on.

> **note:** Your system stores the last two triggered zones in memory. If your system has been triggered but the LED has been reset by turning on the ignition, your dealer can still recall the last two zones that were triggered. Contact your dealer for details.

© 2005 directed electronics—all rights reserved

code hopping

The receiver and remotes use a mathematical formula called an algorithm to change their code each time the remote is used. This technology has been developed to increase the security of the unit. The control unit knows what the next codes should be. This helps to keep the remote "in sync" with the control unit even if you use the remote control out of range of the vehicle. However, if the remote has been pressed many times out of range of the vehicle, or the battery has been removed, it may fall out of sync with the control unit and fail to operate the system. To re-sync the remote simply press several times within range of the vehicle. The alarm will automatically re-sync and respond to the remote normally.

high frequency

Your system transmits and receives at 434 MHz. This provides a cleaner spectrum with less interference and a more stable signal. Enjoy a phenomenal increase in range, even in areas with high radio interference.

© 2005 directed electronics—all rights reserved

owner recognition

Owner Recognition is a revolutionary new feature available only from Directed. Using a Directed Bitwriter, hand-held programming tool, your dealer can program many of the system settings. The programmer makes it possible to program different settings for each remote that is used with the system. Then, whenever a specific remote is used, the system will recall the settings assigned to that remote. Owner Recognition lets up to four users of the system have different settings that meet their specific needs. It is almost like having four separate alarms in your vehicle, one for each user.

> **note:** Owner Recognition cannot be programmed without a Bitwriter and the necessary software. Check with your dealer for more information.

rapid resume logic

This Directed system will store its current state to non-volatile memory. If power is lost and then reconnected the system will recall the stored state from memory. This means if the unit is in Valet Mode and the battery is disconnected for any reason, such as servicing the car, when the battery is reconnected the unit will still be in Valet Mode. This applies to all states of the system including arm, disarm, and Valet Mode.

© 2005 directed electronics—all rights reserved

power saver mode

Your system will automatically enter Power Saver Mode while armed or in Valet Mode, after a period of time in which no operation has been performed. This lowers the current draw on the vehicle's battery. Power Saver Mode takes over under the following conditions:

- Power Saver when the system is armed: After the system has been armed for 24 hours the LED will flash at half its normal rate, decreasing the system's current draw.
- Power Saver in Valet Mode: When the system enters Valet Mode the LED illuminates steadily. If the vehicle is not used (ignition is not turned on) for a one hour period while the system is in Valet Mode, the LED will shut off. If the system remains in Valet Mode, the LED will come back on the next time the ignition is turned on and then back off.

programming options

Programming options control your system's normal, operational set-up. Most options do not require additional parts, but some may require installation labor.

The following is a list of the programmable options, with the factory settings in Bold.

- **Active** arming (from remote only) or passive arming (automatic arming 30 seconds after the last door has been closed).
- Arming/disarming siren chirps **on** or off.

© 2005 directed electronics—all rights reserved

- The ignition controlled door lock feature **on** or off: When this feature is programmed on, the doors will lock three seconds after the ignition is turned on, and unlock when the ignition is turned off. If your installer is programming the security system with the Directed Bitwriter, ignition lock and unlock are independent features that can be programmed separately.
- Passive door locking (with passive arming) or **active door locking** (only when arming with the remote). Passive locking allows the vehicle's doors to lock when the security system passively arms (after the 30-second countdown). This feature only works if passive arming has been programmed.
- Panic mode **enabled**/disabled when the ignition is turned on. (Some states have laws against sirens sounding in moving cars.)
- Forced passive arming **on** or off. If your security system is programmed for passive arming and the forced passive arming feature has been programmed on, the system will passively arm after one hour, even if a protected entry has been left open. Forced passive arming ensures that the system will be armed if a door has accidentally been left ajar when leaving the vehicle.

> **note:** When the system passively arms after one hour, the entry point that has been left open, and anything connected to the same zone, is bypassed and cannot trigger the system. However, the remaining inputs to the system are fully operational.

© 2005 directed electronics—all rights reserved

- Full trigger response **30** or 60 seconds: This determines how long the full triggered sequence lasts. Some states have laws regulating how long a security system can sound before it is considered a nuisance. If your installer is programming the security system with the Directed Bitwriter, the full triggered response can be programmed for any duration ranging from 1 to 180 seconds.
- Automatic Engine Disable (AED) on or **off**. The purpose of this feature is to protect the vehicle from being stolen at all times, regardless of whether or not the alarm is armed. If AED is programmed on, the starter of the vehicle will be disabled 30 seconds after the ignition is turned off. Once the key is turned off, the LED will flash slowly (one-half its normal armed rate) to indicate the AED arming cycle. Thirty seconds later, the starter will be disabled. To start the car, it will be necessary to disarm the system with the remote. It is also possible to disarm the AED feature by turning the ignition key to the RUN position and pressing the Valet button the programmed number of times. AED is also disabled when the system is in Valet mode.

> **note:** This feature will only function if the FailSafe® Starter Kill relay has been installed.

- Siren tones and chirp volume. The output of the Revenger™ Soft Chirp™ siren consists of six different tones in sequence. Any of these tones can be eliminated by a dealer, resulting in a unique, easily identifiable siren sound. The chirps can be either full volume or **6 decibels quieter** than the full alarm blast.

© 2005 directed electronics—all rights reserved

- The engine can be programmed to run for any duration ranging from 1 to 60 minutes. **12 minutes** is the default. After the programmed run time, the engine will shut down and will not restart, unless in Timer Mode.
- While the remote start system is running the engine, the parking lights of the vehicle can **flash on and off** or come on and light steadily.

security & convenience expansions

Listed below are some of the many expansion options available. Please consult your dealer for a complete explanation of all the options available to you.

Audio Sensor: Metal on glass, glass cracking, and breaking glass produce distinctive acoustic signatures. The 506T audio sensor uses a microphone to pick up sounds, then analyzes them with proprietary acoustic software to determine if the glass has been struck.

Backup Battery: The 520T keeps the system armed, triggers the alarm and keeps the starter interrupt active if main battery is disconnected.

Hood Lock: Prevents the vehicle's hood from being opened without a key, keeping thieves away from the system's siren, the battery connections, and other components under the hood.

Field Disturbance Sensor: An invisible dome of coverage is established by installing the 508D "radar" sensor. Your system can

© 2005 directed electronics—all rights reserved

react to any intrusions into this field with the full triggered sequence.

Power Locks: This system offers lock outputs that can control some manufacturers' power door lock systems. For other systems, additional parts may be required.

Power Trunk Release: The accessory output of the system can operate a factory power release for the vehicle's trunk or hatch. Although the on-board relay can control most power trunk releases, sometimes an optional relay is required. If the factory release is not power-activated, Directed®'s 522T trunk release solenoid can often be added.

Power Window Control: Automatic power window control is provided with the 529T and 530T systems. These can operate power windows, and can roll them up automatically when the system is armed, roll them down, or both up and down.

Mobile Video: This system is compatible with Directed Video's MCB1000 Multi-Channel Controller, featuring on-screen security system programming and zone trigger information.

© 2005 directed electronics—all rights reserved

glossary of terms

Control Unit: The "brain" of your system. Usually hidden underneath the dash area of the vehicle. The control unit houses the microprocessor which monitors your vehicle and controls all system functions.

Fault-Proof Starter Interrupt: An automatic switch controlled by your system that prevents the vehicle's starter from cranking whenever the system is armed. The vehicle is never prevented from cranking when the system is disarmed, in Valet mode, or if the starter interrupt switch itself fails. Your system has feature-ready circuitry for the starter interrupt, however installation may require additional labor.

Input: A physical connection to the system. An input can be provided by a sensor, pinswitch or by existing systems in the vehicle, such as ignition or courtesy lights.

LED: A red light mounted at a discretionary location inside the vehicle. It is used to indicate the status of your system.

Shock Sensor: This system has a dual zone shock sensor. This sensor is mounted in the vehicle and designed to pick up impacts to the vehicle or glass.

LCD 2-Way Remote: A hand-held, transceiver which operates and monitors the various functions of your system.

© 2005 directed electronics—all rights reserved

Trigger or Triggered Sequence: This is what happens when the alarm "goes off" or "trips." The triggered sequence of your system consists of the siren sounding and parking lights flashing for the programmed duration.

Valet Button: A small push-button switch mounted at a discretionary location inside the vehicle. It is used to override the starter interrupt when a remote is lost or damaged, or to enter or exit Valet Mode.

Warning Zone Response: Lighter impacts to the vehicle will generate the Warning Zone response. It consists of several seconds of siren chirps and parking light flashes.

Zone: A zone is a separate input that the alarm can recognize as unique. Each input to the system is connected to a particular zone. Often two or more inputs may share the same zone.

© 2005 directed electronics—all rights reserved

Cut along dotted line and fold for a quick and easy reference to keep in your purse or wallet.

QUICK REFERENCE GUIDE

Arming

- To arm, press . When the system arms, you will hear a short chirp, and the parking lights will flash once.

Arming while driving

- To arm the system while driving, press on your remote while the vehicle is running. The system will chirp once and then once more to indicate that the ignition is on.

Disarming

- To disarm, press . You will hear two chirps, and the parking lights will flash twice.

High security disarm

- For high security disarm, press on your remote and the siren will stop sounding. To completely disarm the security system, press again and the system will chirp 4 or 5 times (reporting the trigger).

Disarming without a remote

- Turn on the ignition. Press the Valet button within 15 seconds. The system should now disarm. If it does not, you may have waited too long, so turn the ignition off and on and try again.

Silent Mode™

- Pressing briefly before arming or disarming will eliminate the confirmation chirp(s) for that one operation only.

Panic Mode

- Press for 2 seconds, and you will enter Panic Mode. The siren will sound and the parking lights will flash for 30 seconds. To stop Panic Mode at any time, press on the remote again.

To remote start the vehicle

- Press twice within 3 seconds. The parking lights will turn on (if connected) and the vehicle will start and run for the programmed period of time.

To disable the remote start system

- To disable the remote start, move the shutdown toggle switch to the OFF position.

Location of Valet switch_____

Number of Valet switch pulses for disarming_____

© 2005 directed electronics—all rights reserved

The company behind this system is Directed Electronics.

Since its inception, Directed Electronics has had one purpose, to provide consumers with the finest vehicle security and car stereo products and accessories available. The recipient of nearly 100 patents and Innovations Awards in the field of advanced electronic technology, Directed is ISO 9001 registered.

Quality Directed Electronics products are sold and serviced throughout North America and around the world.

Call **(800) 274-0200** for more information about our products and services.

Directed Electronics is an ISO 9001 registered company.

Directed Electronics is committed to delivering world class quality products and services that excite and delight our customers.

Directed® ELECTRONICS

Vista, CA 92081
www.directed.com

© 2005 Directed Electronics - All rights reserved
G20095 11-05